



GATE RIM LATCH AND PULL SET

BEFORE INSTALLING

Read the installation instructions below.
Observe all local building and safety codes.

INSTRUCTIONS

Unpack and inspect the product for any shipping damages. If you find damages, do not install. Contact Customer Service at 1.866.855.2284. If you need assistance or have questions while installing your latch, contact Customer Service.

We recommend consulting a professional if you are unfamiliar with installing hardware fixtures. Signature Hardware accepts no liability for any damage to the gate or latch or for personal injury during installation.

TOOLS AND MATERIALS:



Tape Measure



Safety Glasses



Drill



Pencil

INSTALLATION

1. With the gate in the closed position, determine the mounting location of the latch body (**A**) on the gate post. Mark the installation holes with a pencil.

2. Measure the location of the spindle on the back of the latch body. Use your measurements to mark the spindle location on the gate post.

3. Drill a spindle hole through the gate with the appropriate drill bit for your installation.

4. Secure the latch body (**A**) to the gate using the provided mounting screws.

5. From the other side of the gate, insert the spindle.

Tip: The spindle can be trimmed to the appropriate length as needed.

6. Place the latch pull (**D**) on the spindle and adjust as necessary to ensure the plate is level. Secure the pull to the gate.

7. On the latch side of the gate, determine the mounting location of the bolt guide (**B**). Make sure that the bolt is level, and secure the guide to the gate with the provided mounting screws.

8. Determine the mounting location of the bolt catch (**C**) on the fence post. Make sure that the bolt will rest in the catch, and secure the catch to the fence.

