



ISADORA KITCHEN FAUCET INSTALLATION

BEFORE YOU BEGIN

We recommend consulting a professional if you are unfamiliar with installing plumbing fixtures. Signature Hardware accepts no liability for any damage to the faucet, plumbing, sink, counter top, or for personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the faucet for shipping damage. If any damage is found, contact our Customer Relations team at 1-866-855-2284.

GETTING STARTED

- Ensure that you have gathered all the required materials that are needed for the installation.
- For these instructions, it is assumed that the old faucet has been completely removed and any necessary repairs or modifications to the water supply have been completed.

TOOLS AND MATERIALS:



Plumbers Tape



Thread Sealant



Basin Wrench (Provided)



Adjustable Wrench




Small Bucket


INSTALLATION

1. Ensure that the water supply below your sink is shut off.

Tip: Place a small bucket below your workspace to catch any water that may drip during the installation process.

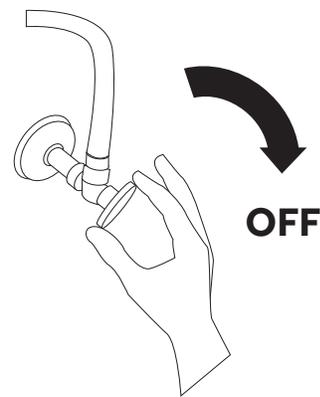


2. Remove the lock nut, metal washer, and rubber washer from the faucet's mounting post.

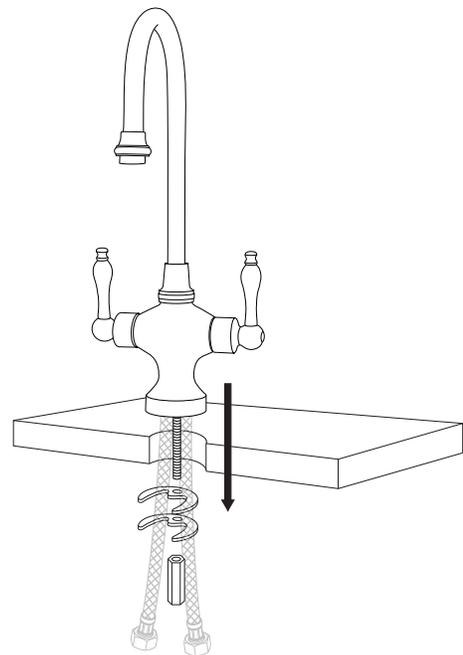




ISADORA KITCHEN FAUCET INSTALLATION


3. Insert the faucet into its prepared mounting hole. Once in position, slide the rubber washer followed by the metal washer back onto the faucet's mounting post. Secure the faucet using the lock nut. Tighten firmly using the provided basin wrench.

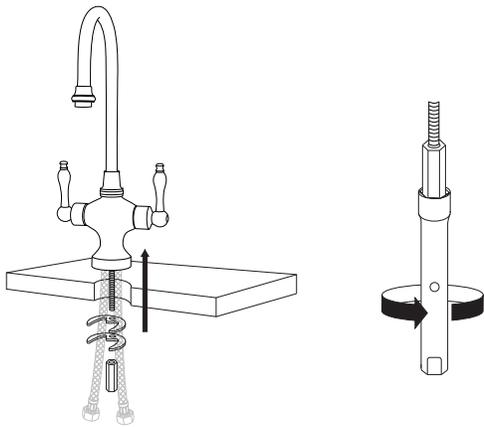

4. Attach the braided water lines to the main water supply. Ensure that the hot and cold lines are connected as marked. Apply plumber's tape or thread sealant to the threads before tightening. Hand tighten the connections, then finish tightening with an adjustable wrench. Be very careful not to overtighten.

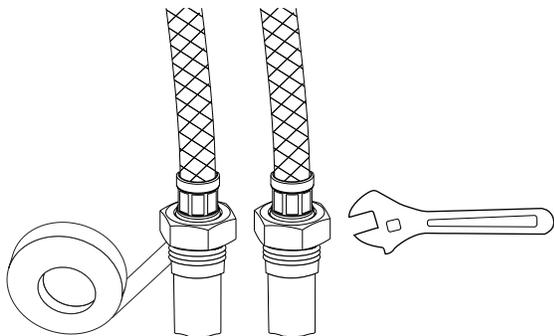

5. Once installation is complete, turn the main water supply back on from below the sink. Check for any leaks.

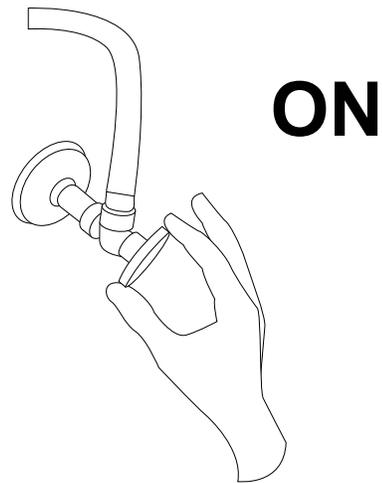

6. Turn the faucet on for approximately 60 seconds to check for any leaks. Ensure that both hot and cold water are functioning properly.

