




POCKET DOOR LOCKS: MODEL NUMBERS SDPA & SDLA INSTALLATION INSTRUCTIONS

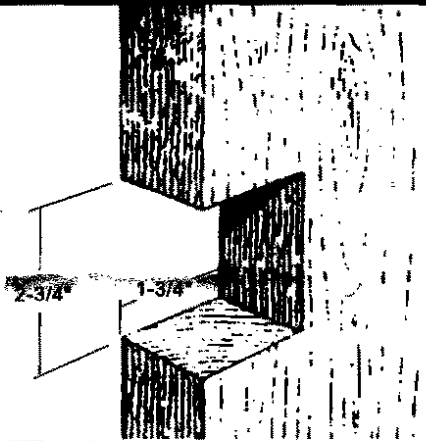

① Cut one simple notch in door.

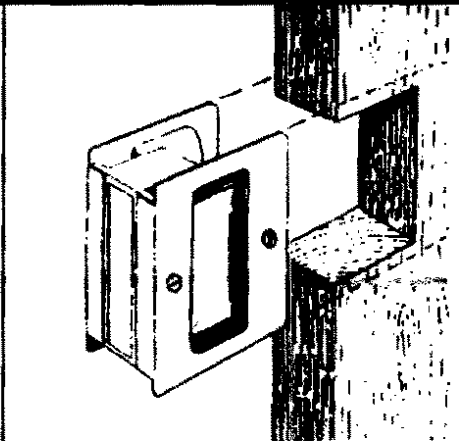


② Slip pull into position as shown.

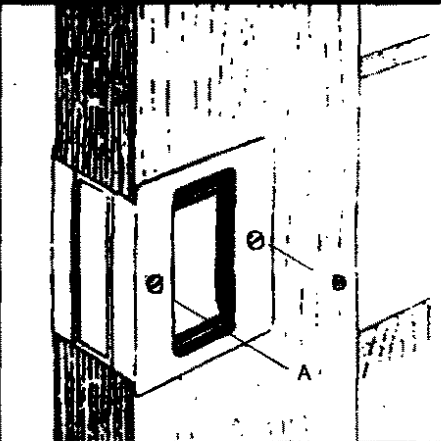


③ (A) Fasten machine screw which tightens and automatically aligns pull. (B) Insert wood screw and thigten.


INSTALLATION OF STRIKE PLATE FOR LOCKING SET ONLY

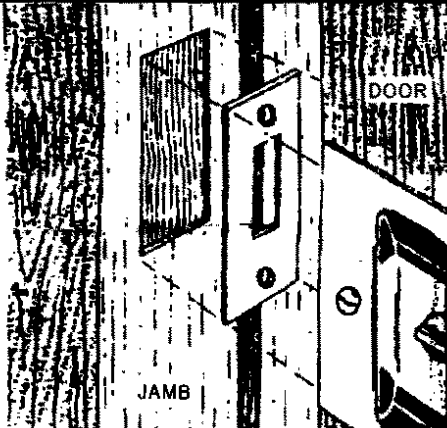

① Mark and mortise strike on jamb to correspond to lock position on door
1" x 2-1/4" x .050 deep

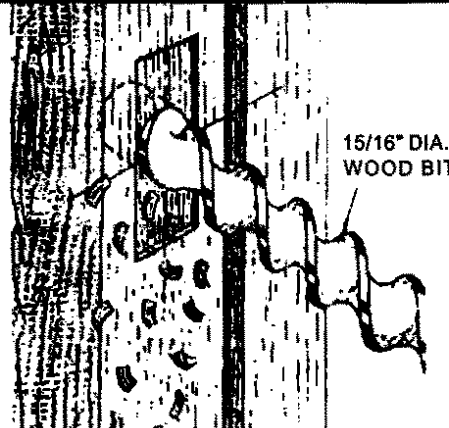


② Drill 15/16" diameter hole 1/2" deep in center of mortise.

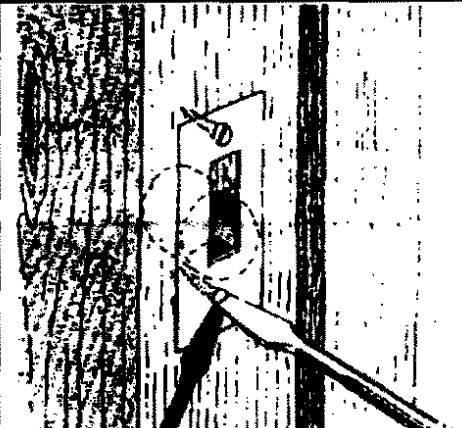

③ Screw strike plate into position using #6 x 5/8" lg. flat head wood screws

TO ASSEMBLE AFTER REVERSING PLATES

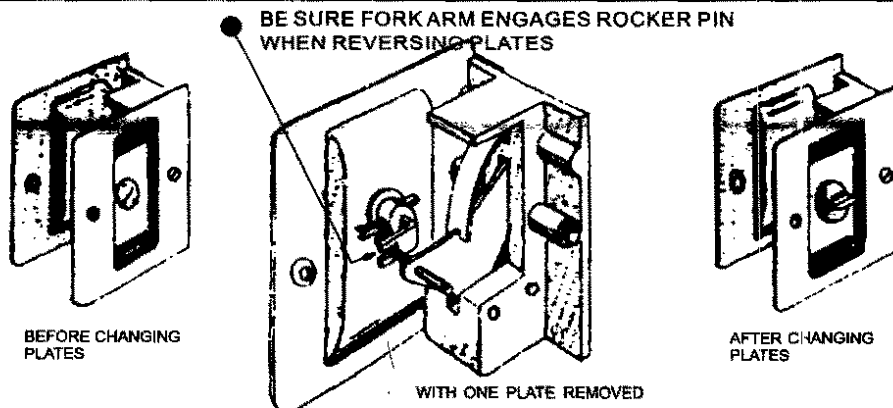

**Heavy Duty
& Adjustable.**

**Fits door
thickness:**

1 3/8" - 1 3/4"

When it is desirable to reverse outside plates on lock assembly, first remove machine screw on each side-change plates from side to side (making sure that fork arm engages rocker pin) and re-assemble

DELTA **DEL TANA**[®]
Architectural Hardware